

## RCBO ACCESSORIES


Accessories for DRCBO-3 and FIB/FIC 4 pole:

- ✔ Auxiliary switch
- ✔ Shunt switch



Ordering reference: see below

<b>DHI 12 Auxiliary Switch for DRCBO-3 2 Pole RCBO</b>
2 C/O contacts (1 C/O "On / OFF" + 1 C/O "Selectable")
Selection of 2nd C/O contact function using a screw driver:
Position 1: On/Off signal    Position 2: Fault signal

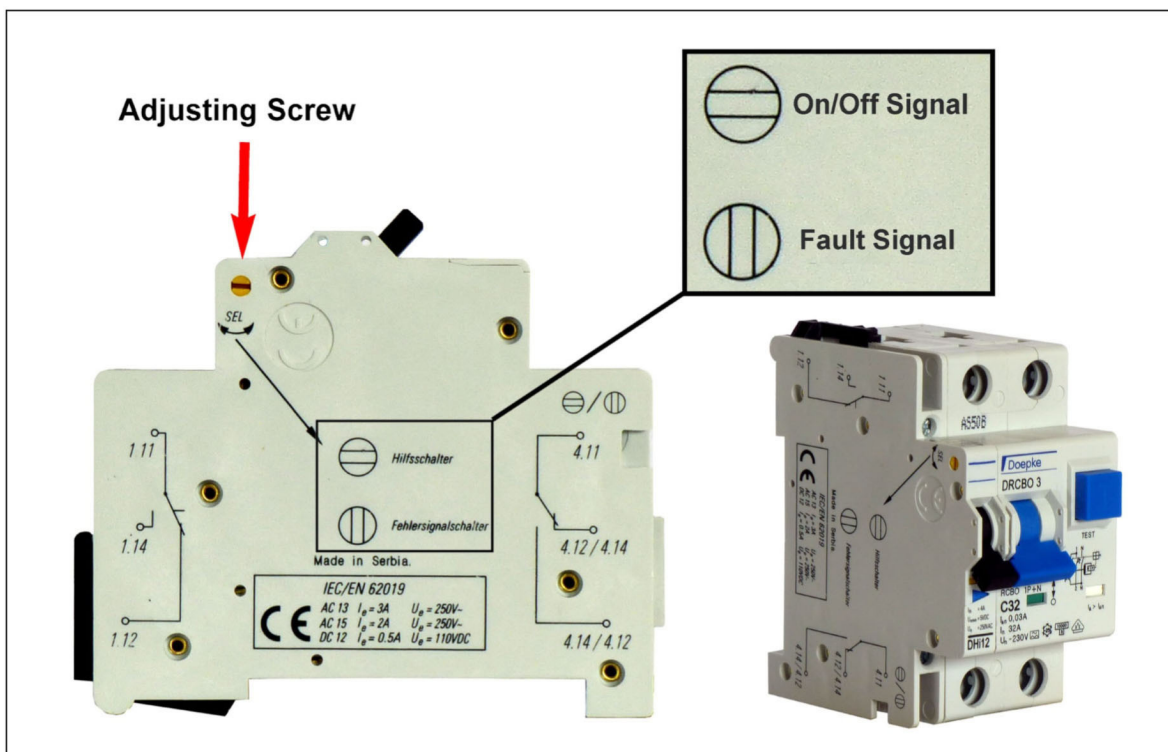

**FAM 1 Shunt trip for DRCBO-3 2 Pole RCBO**

Requires a 230v or 400v supply to operate the shunt trip

Note: FAM 1 cannot be used in conjunction with DHi 12




**DRCBO 4 Hi 1 Aux. Switch for FIC/FIB 4 Pole RCBO**

1 C/O contact

Selection of signalling function using a screw driver:

Position 1: On or Off    Position 2: Tripped

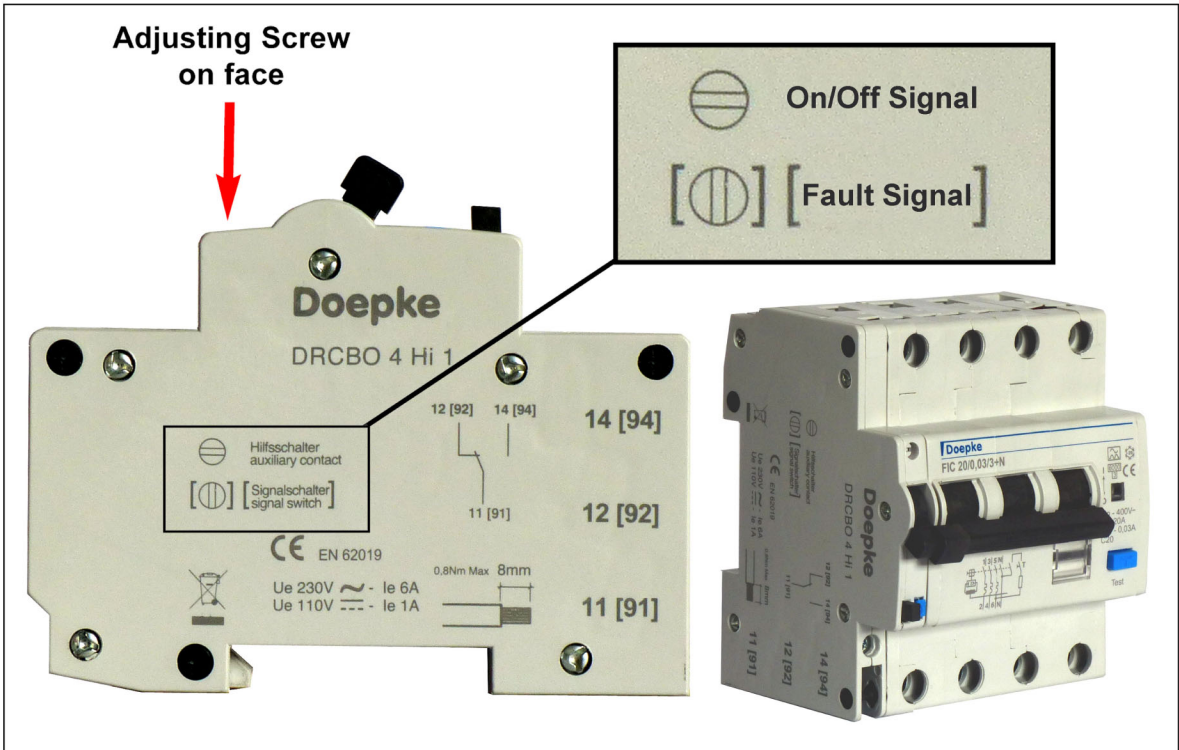

Have a question? Please contact us today

Tel: 01628 829133    email: sales@doepke.co.uk

