

Accessories for ASF & AS:



- ✓ Sreader Enclosure Kits
- ✓ Terminal Shrouds
- ✓ Auxiliary Contacts

Do you need an AX spreader enclosure kit?

Dimension **X** in the table below refers to the cabling space between the terminals and the gland plates - top and bottom of the enclosure:

ASF...	Dimensions (mm)			
Reference	H	W	D	X
ASF 20A	305	205	150	100
ASF 32A	305	205	150	88
ASF 63A	405	305	150	138
ASF 100A	405	305	150	130
ASF 160A	505	405	250	180
ASF 200A	605	405	250	200
ASF 250A	605	405	250	200
ASF 400A	605	405	250	185
ASF 630A	805	605	300	247

AS...	Dimensions (mm)			
Reference	H	W	D	X
AS 20A	305	205	150	116
AS 32A	305	205	150	116
AS 63A	305	305	150	104
AS 100A	405	305	150	150
AS 160A	505	405	250	175
AS 200A	605	405	250	175
AS 250A	605	405	250	175
AS 400A	605	405	250	158
AS 630A	605	405	250	175

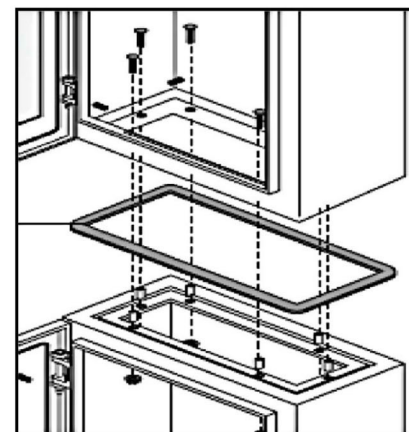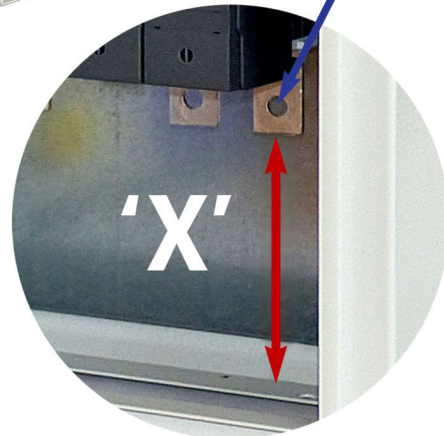

Spreader Kit for ASF... & AS...				
Reference	Dimensions (mm)			Suitable for
	H	W	D	
AX-02	505	405	250	AS/ASF 160-400A, AS-630A
AX-04	805	605	300	ASF-630A

AX-Spreader Enclosure Kit includes gasket & fixings for mounting on AS or ASF enclosures.


<i>Set of 3 Terminal shrouds *</i> <i>for ASF-3 & AS-3</i>	
Rating	Reference
ASF-3100	OSS160GG1S/3
ASF-3160	OSS160GG1S/3
ASF-3200	OSS200GG1S/3
ASF-3250	OSS250GG1S/3
ASF-3400	OSS400GG1S/3
ASF-3630	OSS800GG1S/3

Rating	Reference
AS-3160	OTS250GG1S/3
AS-3200	OTS250GG1S/3
AS-3250	OTS250GG1S/3
AS-3400	OTS400GG1S/3
AS-3630	OTS800GG1S/3

*To order a set of 4 pole Terminal shrouds replace the 3 in the above reference with a 4 e.g. OSS160GG1S/4, OTS250GG1S/4



<i>Auxiliary Contacts for ASF & AS</i>		
Reference	Description	Suitable for
OA1G10	1 N/O	AS-20A to AS-630A & ASF-32A to ASF-630A
OA4B10	1 N/O	ASF-20A

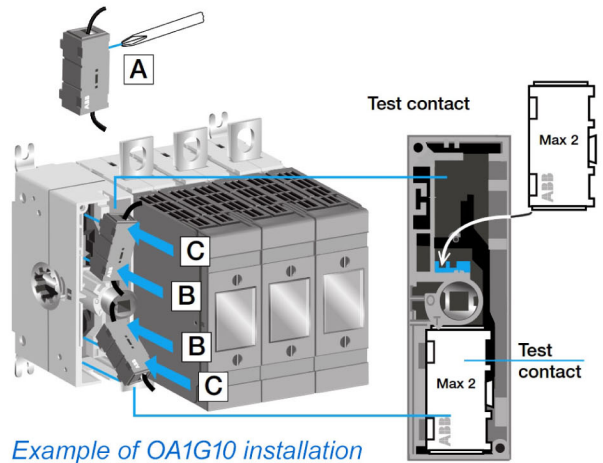

Have a question? Please contact us today

Tel: 01628 829133 email: sales@doepke.co.uk

